

OWNER'S INSTRUCTION MANUAL



7150 TRENDLINE CALLER ID TYPE II TELEPHONE

CORTELCO

THANK YOU
FOR PURCHASING THE 7150 TRENDLINE
CALLER ID TYPE II TELEPHONE

We want you to know all about your new 7150 Trendline Telephone, how to install it, the features it provides, and the services you can expect from its use. We have included this information in your Owner's Instruction Manual.

PLEASE READ BEFORE INSTALLING
AND USING YOUR NEW TELEPHONE EQUIPMENT.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
TELEPHONE USAGE	4
SETUP/INSTALLATION	4
WALL MOUNT INSTRUCTIONS	6
UNIT SETUP	7
FACTORY PRESETS	7
TELEPHONE PART IDENTIFICATION	9
TELEPHONE FEATURES	10
PULSE AND TONE DIALING	10
RECEIVING A PHONE CALL	10
PLACING A PHONE CALL	10
DURATION COUNTER	10
TONE BUTTON	11
AUTOMATIC MEMORY	11
TO STORE A PHONE NUMBER IN MEMORY	11
TO DIAL A PHONE NUMBER IN MEMORY	11
HANDSET VOLUME BUTTON	12
REDIAL BUTTON	12
PAUSE BUTTON	12
HOLD BUTTON	12
FLASH BUTTON	12
CALL WAITING DISPLAY	13
CALLER ID FEATURES	14
MESSAGE LIGHT	14
MESSAGE WAITING	14
RECEIVING CALLS	15
REVIEWING CALLS	15
DELETING CALLS	16
CALLBACK/DIAL BUTTON	16

OPTIONS BUTTON	17
MESSAGE ERROR	18
NO DATA SENT	18
PRIVATE CALLS	18
UNKNOWN CALLS	18
TOLL CALLS	18
FORWARDED CALLS	18
TELEPHONE SERVICE PROBLEMS	19
MAINTENANCE INFORMATION	20
TELEPHONE REPAIR/FCC	21
INDEX	23

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using your telephone equipment to reduce the risk of fire, electrical shock, and injury.

1. **Read and understand all instructions** in the Owner's Instruction Manual. **Read all warnings** and follow all instructions marked on the product.
2. **Unplug this product from the wall outlet before cleaning.** Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
3. **Do not use the telephone near water.** For example, do not use near a bathtub, wash bowl, kitchen sink, laundry tub, swimming pool, or in a wet basement.
4. **Do not place this product on an unstable cart or stand.** The product may fall causing serious damage to the product.
5. **Use only the type power source indicated on the label.** If you are not sure of the type power supply to your home, consult your dealer or local power company.
6. **Do not place any objects on the telephone line cord.** Do not locate the telephone where the line cord will be walked on.
7. **Do not block or cover ventilation slots and openings** in the bottom of the telephone. The openings should never be blocked by placing the telephone on a bed, sofa, rug, or other similar surfaces. The telephone should never be placed near or over a radiator or heat register. The telephone should never be placed in a built-in installation unless proper ventilation is provided.
8. **Never spill liquid on the telephone or push objects of any kind through ventilation slots.** Liquid or objects may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
9. **Do not disassemble this product.** Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electrical shock when the product is subsequently used.

10. **Do not overload outlets and extension cords.** Some telephones require AC power from an outlet. Overloading the outlets can result in the risk of fire or electric shock.
11. **Avoid using a telephone during a local thunderstorm.** There may be a remote risk of electrical shock from lightning.
12. **Do not use a telephone to report a gas leak in the vicinity of the leak.**
13. **Unplug the telephone from the wall outlet and refer servicing to qualified service personnel** under the following conditions:
 - When the line cord is frayed or plugs damaged.
 - If liquid has been spilled into the telephone.
 - If the telephone has been exposed to rain or water.
 - If the telephone does not operate properly by following the operating instructions. (Adjust only those controls covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.)
 - If the telephone has been dropped or the housing damaged.
 - If the telephone exhibits distinct change in performance.

SAVE THESE INSTRUCTIONS

7150

 
TELEPHONE USAGE

SET UP/INSTALLATION

1. Connect the telephone line cord.


a. To connect without an answering machine.

- Use the new line cord to connect the PHONE jack of your new caller ID phone to the modular wall jack.

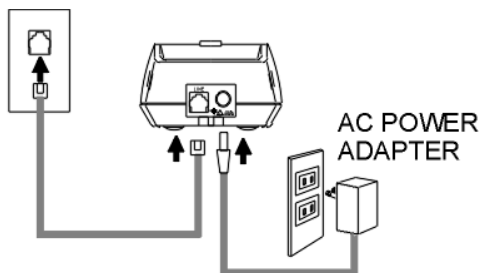


b. To connect with an existing answering machine.

 - Use the existing line cord supplied to connect the LINE jack of your answering machine to the wall modular line jack.
- Use the new line cord supplied to connect the telephone's jack of your new Caller ID phone to the PHONE jack of your answering machine.
- Set your answering machine to answer the phone after 2 or more rings.

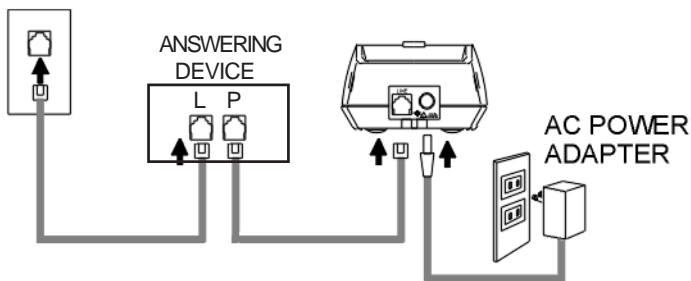

 
2. Connect the adaptor by plugging the AC power adaptor into the wall outlet and the adaptor tip into the jack at the rear side of unit. (Use only 9V DC, 200mA, center positive Class 2 adapter.)
3. Insert 4 AA Batteries into the battery compartment on the bottom of the telephone. The Low Battery icon is displayed on the Caller ID display when the battery voltage is low. Batteries should be replaced at that time. (Batteries are not required for operation but to insure CID information is not lost during a power outage.)

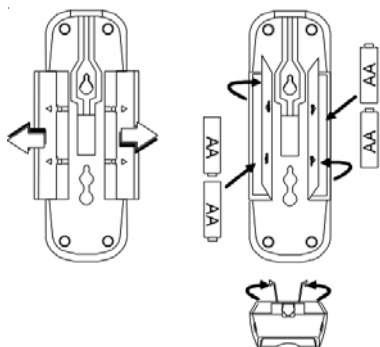

4. Follow the procedure “*Unit Setup*” to set up your unit.
5. Place the unit on a flat table or mount it on a wall. Refer to page 6 for wall mounting instructions.

WALL MOUNT INSTRUCTIONS

 1. Install the Caller ID Telephone in wall mount position and route cords using the short linecord. See Step 1 in Telephone Usage for specific instructions.
2. Connect the adaptor. See Step 2 on the preceding page.
3. Push out the handset hook and reattach in opposite direction for the wall mount position, plug the coiled cord into the handset, and then plug the other end of the cord into the case.
4. Place the handset on the base.

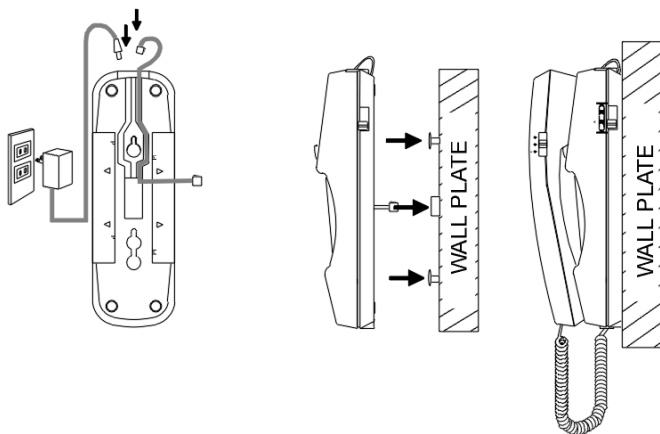

UNIT SETUP

FACTORY PRESETS

The following table shows you the factory settings for your unit:


<u>Display</u>	<u>Setting</u>
Language	English
LCD Contrast	3
Area Code	No Setting

After the adaptor is connected, the display will show as indicated below for setting. If you have previously applied power, press the review buttons simultaneously to enter Setup.

1. [*SELECT LANGUAGE*] appears on the display. Press the **REVIEW UP** (▲) to select ESP/Spanish or **REVIEW DOWN** (▼) to select ENG/English. A check mark designates the current selection. Then press the **DELETE** button to confirm the selection.



 2. When [*LCD CONTRAST*] appears, press **REVIEW UP** (▲) button to set the contrast darker, *and then* you can press **REVIEW DOWN** (▼) button to set the contrast back to the preset or lighter. The current selection will flash. Press **DELETE** to confirm and the screen will display the next option. The factory preset is 3.



- When [ENTER AREA CODE] appears, use **REVIEW UP** (▲) button and **REVIEW DOWN** (▼) button to set your local area code.



REVIEW UP (▲) button - to change the digit from -. 0, 1, 2, -9

 
REVIEW DOWN (▼) button - to move to the next digit.

When you are finished setting the local area code, press **DELETE**.

This Caller ID allows three additional area codes to be programmed. After pressing DELETE, "ENTER 2ND CODE" will be displayed for programming. Use REVIEW UP, REVIEW DOWN, and DELETE to program the 2nd, 3rd, and 4th area codes. The DELETE button can be used as a skip feature. For example, if there are only two area codes to be programmed, when "ENTER 3RD CODE" and "ENTER 4TH CODE" appears, press the DELETE button to skip the programming.


- The time and date are automatically set when a Caller ID (CID) number is received. The unit will keep the current time accurately, and is updated each time a CID number is received.

Upon completion of the Setup, the following screen appears:



After you have set up the unit completely for the first time, press the **REVIEW** buttons simultaneously to review or reprogram the Language, LCD Contrast or Area Code.

 TELEPHONE PART IDENTIFICATION

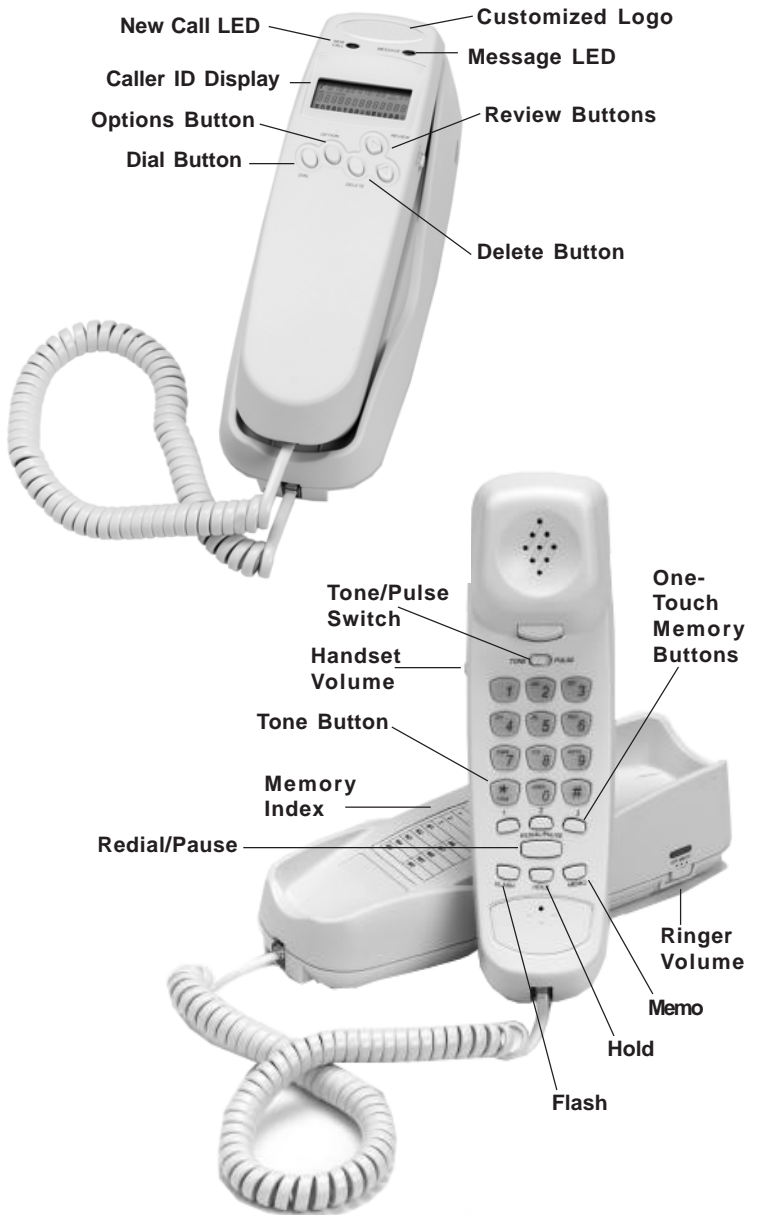

TELEPHONE FEATURES

PULSE AND TONE DIALING

1. If your telephone line accepts a touch-tone dialing, set the **PULSE/TONE** switch to the Tone position.
2. If your telephone line requires a rotary (pulse) dialing, set the **PULSE/TONE** switch to the Pulse position.
3. If you are unsure which system you have, set the switch to the **TONE** position. Lift the handset. When you get a dial tone, dial a telephone number. If the dial tone continues, move the switch to **PULSE**, and then dial the telephone number again.
4. If you are using Pulse dialing and you want to make a tone entry after pulse dialing, press the * button once, then dial the number.

RECEIVING A PHONE CALL

1. Be sure the **RINGER** switch is set to the **MID** or **HI** position.
2. When the phone rings and the caller's information shows on the display window (refer to Using the Caller ID Function), lift the handset to begin your conversation. To insure you receive the Caller ID information correctly, do not answer until the Caller ID Data is observed in the display.
3. Set the Ringer switch to the **OFF** position when you do not want to be interrupted by the telephone ringing. Remember to set the ringer switch back to MID or HI when you want to receive calls again.

PLACING A PHONE CALL

1. Lift the handset and wait for a dial tone.
2. Dial the telephone number you wish to call. The number will appear on the display window. Hang up the handset when you finish your call.

DURATION COUNTER

A built-in counter will time your call 6 seconds after you lift the handset or you dial a telephone number.

TONE BUTTON

If the **PULSE/TONE** switch is set to the **PULSE** position, and you want to make a tone entry (ex. Telephone number into pager, access long distance, or tele-banking) after pulse dialing, press the **TONE** button (*) on the dial keypad once, then dial the number. The number dialed out will be changed to tone dialing automatically without setting the **PULSE/TONE** switch to **TONE** position. The unit will automatically return to pulse dialing mode after you hang-up.

AUTOMATIC MEMORY

To Store A Number In Memory:

1. Pick up the handset. Press and hold the **MEMO** button for more than 2 seconds. "MEMORY STORING" will appear on the display.
2. Dial the telephone number (15 digits maximum) to store in *memory*.
Note: The memory locations can be chained together to store numbers of longer length. Numbers can be stored in either Tone or Pulse mode. If a pause is desired in the dialing sequence, press REDIAL/PAUSE.
3. Press **MEMO** again.
4. Press the desired memory location.
 - To store in an auto memory button (located under dial keypad) - Press 1, 2, or 3). The "IN DIRECT X" will appear to confirm the number location.
 - To store in a keypad memory location - Press one of the keypad buttons (1, 2, 3, or 0). The "IN KEYPAD X" will appear to confirm the number location.
5. Use the index located on the base unit to write in the name and memory location.

To Dial A Phone Number In Memory

1. Lift the handset and wait for a dial tone.
2. Select any memory location.
 - To dial an auto memory button (located on the handset) - Press the desired auto memory button (1, 2, or 3).
 - To dial a keypad memory location - press the **MEMO** button first, and then the desired keypad button (1, 2, 3.... or 0).
3. The number will be displayed and dialed automatically.

HANDSET VOLUME

The handset volume switch allows you to adjust the volume level to LO/MID/HI. The switch is located on the right side of the handset.

REDIAL/PAUSE BUTTON

1. If the number you dialed is busy, or you want to call the last number dialed again, lift the handset, or press and release the hookswitch for a new dial tone.
2. Press **REDIAL**. The number will appear on the display window.
3. The last number called (32 digits maximum) will automatically be redialed.

This button also allows you to insert a 3.6-second pause in the dialing sequence. This is particularly useful if you are connected to a PABX system where you must dial an access code (usually the number 9) to obtain an outside line.

1. Press the **REDIAL/PAUSE** button once and release at any point in the dialing sequence where a pause is desired.
2. The **REDIAL/PAUSE** button can be pressed more than once to create a longer pause.

HOLD BUTTON

1. To place a call on hold, press the **HOLD** button and hang up the handset. The display will show "**PHONE ON HOLD**" and remain lighted until you resume your conversation.
2. To resume your conversation, lift the handset or that of any extension phone on the same line.

FLASH BUTTON

This telephone provides a line break signal for accessing PABX service or for convenient use of Call Waiting from your local telephone company. If you have Call Waiting service, you can operate the Call Waiting function per the following instructions.

1. While having a conversation, another party calls and you hear a tone.
2. Press the **FLASH** button once and release. The first conversation is placed on hold and the second call can be answered.
3. Press **FLASH** button again and release. The first caller can be spoken to again and the second call is placed on hold.

Note: *If you also have subscribed to Call Waiting Caller ID service, please see the section on Call Waiting Display below.*

CALL WAITING DISPLAY

In the past, if you had call-waiting service, a tone alerted you there was a new call coming while you were on an existing call.

Now our Call Waiting Caller ID not only tells you there is another call waiting, but lets you know who the caller is before you answer it. The call waiting information will be shown on the unit's display.

The **CALL WAITING** (CW) symbol will flash for 16 seconds along with the telephone number and name of the person who is on call waiting. Press the FLASH button to put the existing call on hold and answer the new call.

No matter whether you answer the call or not, the Call Waiting Caller ID will store the call information for future reference.

Note: *Make sure you have subscribed to both Call Waiting Caller ID and Caller ID service from your local telephone company. If you only have Caller ID service, the unit works for Caller ID only.*

CALLER ID FEATURES

MESSAGE LIGHT

An indicator marked **NEW CALL** will light up to let you know when there are new calls received.

If you have a voice mailbox service with your telephone company, another indicator marked **MESSAGE** will flash to alert you to dial your telephone company to check your new messages.

The **MESSAGE** indicator also monitors the unit's situation. When the phone is in use, the **MESSAGE** indicator will be on continuously. If the indicator is flashing quickly, it means the phone is ringing.

MESSAGE WAITING

This units **MESSAGE WAITING DETECTION** is for both FSK and Stutter Tone Systems.

IF YOUR SERVICE IS FSK:

1. If you have a voice mailbox service from the phone company, the **MESSAGE** indicator will flash and **[MESSAGE WAITING]** will appear on the display for 20 seconds when a message waiting on signal from the Central Office is received.
2. The **MESSAGE** indicator will go off and **[MSG WAITING OFF]** will appear for 20 seconds if the message waiting off signal is sent from the Central office.

 
IF YOU ARE IN AN AREA WHERE AN FSK SIGNAL IS NOT AVAILABLE:

1. This unit will check your line for a stutter dial tone every time you hang up or each time a call goes unanswered. The **MESSAGE** indicator will flash when there is a message waiting.
2. You may experience some delay in seeing the **MESSAGE** indicator light up even though there are messages in your mail box. This delay is due to regulatory matters and does not indicate a problem with the unit.


This unit may not be activated or deactivated under certain conditions. For example, when you retrieve your message from an outside phone (not your own telephone number), the **MESSAGE** indicator may not be canceled when you return home. If you experience this situation, pick up the receiver and hang up. The **MESSAGE** indicator will cancel.

RECEIVING CALLS

1. When the telephone is not in use and a new call is received, the display will show the *NEW* symbol, the phone number, the callers name, and time and date of the call for 20 seconds. The *RPT* (REPEAT) symbol will appear if the call has come in more than once.



 2. After 20 seconds with no activity, the display will default to the Stand-By screen and remain on until another call is received or a button is pressed. This will show you the total number of calls stored and how many new calls have not been reviewed.




REVIEWING CALLS

1. When the *NEW* Call LED is flashing, you have new incoming calls. Next to "NEW" in the display is the total number of new calls. Press the **REVIEW UP** (▲) or **REVIEW DOWN** (▼) button to review the incoming stored calls.
2. The *NEW* symbol attached to each call will be removed after you review the call.
3. If the *NEW* Call LED is still flashing when the display goes back to the Stand-By screen, there are new calls that you have not yet reviewed.
4. The reviewed number can be stored into any of the auto memory buttons or keypad memory locations by pressing the **MEMO** button first (at least two seconds), then press the MEMO button and the desired memory location.
5. When you have reached the end of the call records, the display will indicate [-END OF LIST-], confirming there are no more stored calls.

Note: If the telephone number received is more than 10 digits, the unit will only store the last 10 digits into memory.

DELETING CALLS

 
1. To delete an individual call: When reviewing calls, you can delete an individual call by pressing the **DELETE** button twice. The display will be erased line by line and the rest of the records will be renumbered.
2. To delete all calls: When reviewing calls, you can delete all calls by pressing and holding **DELETE** for more than 3 seconds. Then [**DELETE ALL**]' will appear. Press **DELETE** to confirm you really want to erase all records. [**-NO CALLS-**] appears on the display to show there are no calls stored in memory.



CALLBACK

When reviewing received calls, there are two ways to dial the telephone numbers shown on the display by pressing **DIAL**.

 1. With the handset in its cradle (on-hook), press **DIAL**. [**PICKUP PHONE...**] will appear in the LCD display to ask you to pick up the handset. The number will be dialed after you pick up the handset.



2. If you pick up the handset, review the calls, and press **DIAL**, the displayed number will be dialed immediately.

Note: The **HANDSET** symbol will light up in the upper left hand corner of the LCD display when the handset is picked up.

If [*SET AREA CODE*] appears prior to [*PICKUP PHONE...*]” or dialing, it means you have not programmed the local *area code*. Please hang up the telephone and program the *area code*. To program the *area code*, press and hold the review buttons simultaneously until you enter the setup.

1. If a local call (a telephone number with the same area code as you set) is reviewed and its 7-digit number displayed, press **DIAL** to dial the number displayed.
2. If a long distance call (a telephone number with a different area code than you set) is reviewed and its 10-digit number (3-digit area code + 7-digit telephone number) is displayed, press **DIAL** to dial the number displayed.

OPTIONS BUTTON

The **OPTIONS** button allows you to change the format of the displayed number. The available format follows:

7-digit	7-digit telephone number.
10-digit	3-digit area code + 7-digit telephone number.
11-digit	long distance code 1 + 3-digit area code + 7-digit telephone number.

If a local call, and its 7-digit number is displayed:

- Pressing **OPTIONS** once will change it to a 10-digit format (your area code + 7-digit number).
- Pressing **OPTIONS** twice will change it to an 11-digit number (1 + your area code + 7-digit telephone number).
- Pressing **OPTIONS** three times will go back to the original 7-digit telephone number.

If a long distance call, and its 10-digit number is displayed,

- Pressing **OPTIONS** once will change it to an 11-digit number (1 + 3-digit area code + 7-digit telephone number).
- Pressing **OPTIONS** twice will remove the 3-digit area code and change to display only the 7-digit telephone number.
- Pressing **OPTIONS** three times will go back to the original 10-digit number.

When the desired format of the telephone number is reached, press **DIAL** to dial the displayed number.

MESSAGE ERROR

- The display indicates [-MESSAGE ERROR-] if your unit receives a call that has an error in the transmission or reception.

NO DATA SENT

- [-NO DATA SENT-] will be displayed if there is no caller ID (CID) number sent from the telephone company while ringing.

PRIVATE CALLS

- If the caller has exercised the option to block his number from being sent, [PRIVATE NUMBER] and his name will alternately display on the screen when this information is received.
- If the caller has exercised the option to block his name from being sent, [PRIVATE NAME] and his telephone number will be displayed on the screen.
- If the caller has exercised the option to block his name and number from being sent, then [PRIVATE CALLER] will be displayed on the screen.

UNKNOWN CALLS

- When the telephone company is unable to provide information of the caller's telephone number, [UNKNOWN NUMBER] and his name will alternately display on the screen when this information is received.
- When the telephone company is unable to provide information of the caller's name, [UNKNOWN NAME] and his telephone number will be displayed on the screen.
- When the telephone company is unable to provide information of the caller's name and number, [UNKNOWN CALLER] will be displayed on the screen.

TOLL CALLS

- A toll symbol will be attached to the call if your telephone company delivered a signal with the number. It indicates that the calling number is long distance.

FORWARDED CALLS

- This is only available with a messaging service. The forward icon is observed in the display when an incoming call is a forward. A telephone number with the forward icon attached to a call cannot be redialed by pressing the Dial Button.

TELEPHONE SERVICE PROBLEMS

TROUBLESHOOTING

PHONE DOES NOT RING

1. **HI/LOW/OFF** ringer switch is set to **OFF** position
2. Line cord is disconnected at telephone outlet or at telephone end.
3. Phone is **OFF HOOK**. Make certain the hookswitch is depressed when the handset is in the cradle.

NO DIAL TONE

Wire is disconnected at telephone jack or at wall jack. Test the telephone in a different wall jack. If it works, the first jack may be defective.

HAVE DIAL TONE BUT CANNOT DIAL OUT

Check if the PULSE/TONE switch is at the correct position.

REDIAL BUTTON DOES NOT FUNCTION

The telephone may have been momentarily disconnected from the telephone jack.

BLANK SCREEN

Check if the adaptor is connected properly

CALLERS ARE NOT DISPLAYED ON THE SCREEN

1. Verify that you have subscribed to the appropriate service (Caller ID and Call Waiting Caller ID) from your telephone company. If you only subscribed to the Caller ID service this unit will not display the call waiting caller ID information.
2. Check if your answering machine is set to answer the call before 2 rings. If so, switch the setting to answer after 2 rings.

NO CALLER INFORMATION IS DISPLAYED WHEN HEARING THE CALL WAITING AUDIO SOUND

Verify that you have subscribed to the Call Waiting Caller ID service from your telephone company.

MESSAGE ERROR HAPPENS FREQUENTLY

Caller information was not transmitted properly. Check with your telephone company to see if there is a problem with your phone line.

Since our special design will always retain your stored call records, we encourage you to disconnect all the telephone cords and adaptor; and then reinstall the unit step by step per this instruction manual before you ask for service.

SPECIAL NOTE: *The call records will not be erased when the adaptor is disconnected. A special E2PROM design allows the unit to always retain your stored call records after you disconnect the adapter*

MAINTENANCE INFORMATION

Treat your telephone equipment with care for trouble-free performance. Avoid dropping the handset. Carefully place the handset on-hook after use.

Avoid putting near heating appliances and devices that generate electrical noise (for example, motors and florescent lamps).

Clean your telephone equipment with a damp cloth. Stains may be removed with a mild soap. Do not use liquid or aerosol detergents or cleaning agents.

Do not expose to direct sunlight or moisture

Retain the original package in case you need to ship it at a later date.

TELEPHONE REPAIR

DO NOT ATTEMPT TO REPAIR THIS PRODUCT YOURSELF. Call Waiting Caller ID Telephones manufactured by CORTELCO must be returned to us for repair.

You can return your telephone to CORTELCO for repair or replacement in accordance with our LIMITED WARRANTY.

CORTELCO warrants **THIS PRODUCT** against defects in material and workmanship in accordance with our LIMITED WARRANTY. If your telephone is returned for repair, include a copy of your sales receipt containing the date-of-purchase. **DO NOT INCLUDE THE ORIGINAL SALES RECEIPT.**

If date-of-purchase is not included, the factory date printed on the label on the bottom of your telephone will be used as the date-of-purchase. The factory date allows six months for distribution and sale of this product.

If you return your telephone for repair, the warranty period is not extended. The original date-of-purchase continues to apply to your warranty.

OUT-OF-WARRANTY REPAIR We will repair this product for a nominal fee after the LIMITED WARRANTY has expired if you send it to us in a complete and undamaged condition. The repaired Call Waiting ID will be shipped to you C.O.D., freight collect.

RETURN-FOR-REPAIR PACKAGING If you are returning a unit to us for repair, package it carefully, in the original carton. Be sure to include your return address, a copy of the sales receipt showing date-of-purchase, and a note describing the problem you have with your Call Waiting Caller ID Telephone. Shipping must be prepaid. If the telephone is in warranty, it will be repaired or replaced, at our option, at no cost to you, and it will be returned shipping prepaid.

Ship your Call Waiting Caller ID (shipping prepaid) to:

CORTELCO
REPAIR CENTER
1703 SAWYER ROAD
CORINTH, MS 38834

FCC INFORMATION

Part 68 is a Federal regulation which requires equipment to be tested and registered with the FCC prior to its connection to the network. This equipment complies with Part 68 of FCC rules. On the bottom of the telephone is a label that contains, among other information, the FCC Registration Number and the Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The **Ringer Equivalence Number**, which is used to determine the number of devices you may connect to your phone line, indicates the amount of power that your telephone draws from the telephone company line during ringing. If you have more than one telephone (or other terminal device) connected to the telephone company line, you should total the ringer equivalence numbers (REN s), and be sure that the total is not more than five. Your telephones may not ring if the total is more than five. Also, in some rural locations, your telephone may not ring if the REN total is more than three.

RESTRICTIONS You must not connect your telephone to coin-operated lines or party lines.

INSTALLATION This model telephone must be connected to the telephone company lines through a modular jack. The required USOC for the modular jack is RJ11C for desk mounting and RJ11W for wall mounting. The USOC number is printed on the label on the bottom of your telephone.

HEARING-AID COMPATIBILITY The handset on your telephone will work with magnetically-coupled hearing aids. You can use a hearing aid equipped with a T (Telephone) switch.

IN CASE OF TROUBLE If your telephone should cause problems on the telephone line, the telephone company can temporarily disconnect your service. The telephone company must then notify and allow you to correct the problem.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

INDEX

A, B, C

Answering Device	4
Area Code	7
Call Waiting	13

D

Deleting Calls	16
Dial Button	16
Display Contrast	7
Display Language	7
Duration Counter	10

E, F, G, H

Factory Presets	5
Features - Caller ID	14
Features - Telephone	10
Flash Button	12
Forwarded Call	18
Handset Volume	12
Hold Button	12

I, J, K, L, M

Installation	4
Maintenance	20
Making calls	16
Memory	11
Message Error	18
Message Light	14
Message Waiting	14

N, O, P

No Data Sent	18
Options Button	17
Part Identification	9
Pause Button	12
Placing Calls	10
Private Calls	18
Pulse Dialing	10

Q, R

Receiving calls - Tele	10
Receiving calls - CID	15
Repair	21
Reviewing Calls	15
Redial Button	12

S, T

Safety	2
Service Problems	19
Telephone Setup	4
Toll Call	18
Tone Button	11
Tone Dialing	10
Troubleshooting	19

U, V, W, X, Y, Z

Unknown Calls	18
Wall Mounting	6

LIMITED WARRANTY

If you purchased this product new in the U.S. or Puerto Rico, **CORTELCO** warrants it against defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is in lieu of all other express warranties. During the warranty period, **CORTELCO** agrees to repair or, at its option, replace the defective product, or any part of it without charge for parts or labor. This is your exclusive remedy. This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, the affixing of any attachment not provided by **CORTELCO** with the product and loss of parts. The warranty is voided in the event any unauthorized person alters or repairs the unit.

Telephone companies use different types of equipment and offer various types of services to customers. **CORTELCO does not warrant that this product is compatible with the type of equipment of any particular phone company or the services provided by it.**

CORTELCO DISCLAIMS ANY IMPLIED WARRANTY, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, AS OF THE DATE ONE YEAR FROM THE ORIGINAL PURCHASE OF THE PRODUCT. **CORTELCO** ASSUMES NO RESPONSIBILITY FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

If failure occurs and your Call Waiting Caller ID Telephone is in warranty, service shall be provided by returning it shipping prepaid to:

CORTELCO
Repair Center
1703 Sawyer Road
Corinth, Mississippi 38834

The product will be repaired or replaced if examination by Corelco determines the product to be defective.