

C10
EXT console

WWW.CORTELCO.COM



EXT console C10 Quick Installation Guide




CORTELCO

Smart VOIP

1

Instruction

Check Your Package Contents

The following items should be included with your C10:



C10 EXT console



Plastic fitting



C10 Quick Installation Guide



Screw



Ethernet Cable



Base bracket




Power adaptor (optional)

2

LED/Key Locations

Outside view

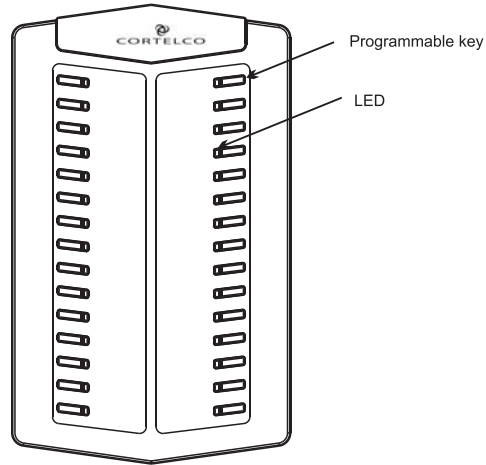


LED Status for BLF Mode		LED Status for Presence Mode	
LED State	Description	LED State	Description
Steady green	The object is idle.	Steady green	The object is online.
Slow blinking red	The object is ringing.	Slow blinking red	The object is ringing.
Steady Red	The object is active.	Steady Red	The object is active.
Fast blinking red	Connection failure	Fast blinking red	Connection failure
Off	Unsubscribed	Off	Unsubscribed
LED Status for Line Mode		LED Status for MWI Mode	
LED State	Description	LED State	Description
Steady green	The object is idle.	Blinking green	New Voice Mails
Slow blinking red	The object is ringing.	Off	No New Voice Mails
Steady Red	The object is active.		
Fast blinking red	Connection failure		
Off	Unsubscribed		


3

Console Installation

If only one EXT console is used, an external power supply is not necessary. The phone will supply power to the console. See the connection diagram below.

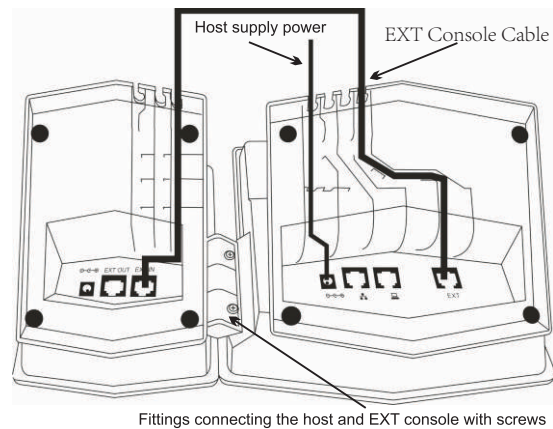


When more than one console is used, an external power supply is required. Only one supply is required for up to five consoles. This is the maximum number of consoles which can be connected to one C62 telephone. See connection diagram below.

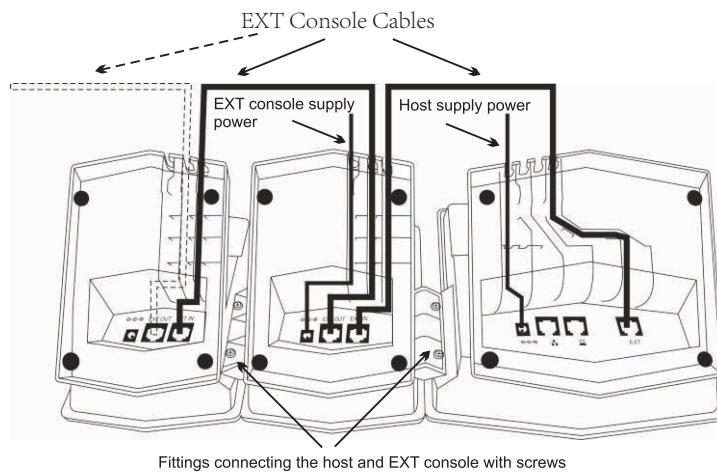

4 Web Configuration


Open your web browser and type in the IP address of the phone.

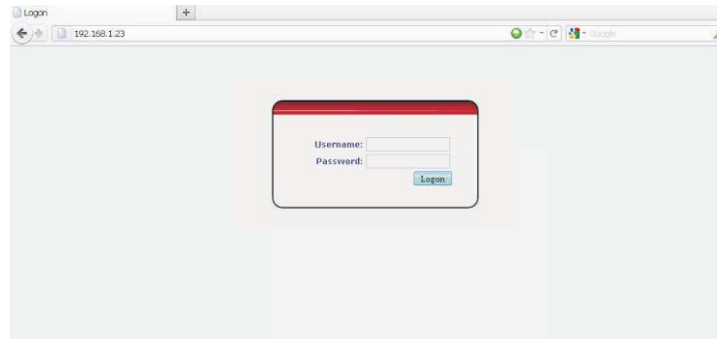

Enter User name and Password.

Default for both User name and Password is “admin”

You will then see the screen shown below.

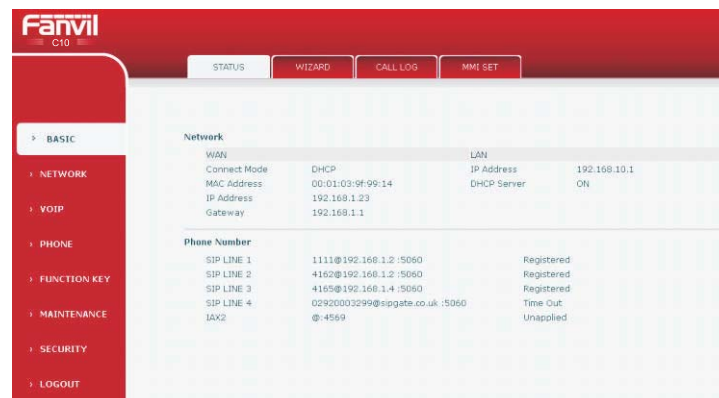

Fanvil C10

STATUS WIZARD CALL LOG MM SET

Network

WAN		LAN	
Connect Mode	DHCP	IP Address	192.168.10.1
MAC Address	00:01:03:9f:99:14	DHCP Server	ON
IP Address	192.168.1.23		
Gateway	192.168.1.1		

Phone Number

SIP LINE 1	1111@192.168.1.2:5060	Registered
SIP LINE 2	4162@192.168.1.2:5060	Registered
SIP LINE 3	4165@192.168.1.4:5060	Registered
SIP LINE 4	0292003299@epgate.co.uk:5060	Time Out
JAX2	@-4569	Unapplied

5 Web Configuration

Click FUNCTION KEY - External Console

External Console	Key	Type	Value	Line	Sub-Type	Pickup Number
External Console 1	F.1	Memory Key	4147	SIP1	Intercom	
	F.2	Line	SIP1	SIP1	None	
	F.3	Key Event		SIP1	MWI	
	F.4	Dndf	21981	SIP1	None	
	F.5	Memory Key	4141	SIP1	BLF	4147
	F.6	None	SIP1	SIP1	None	
	F.7	None	SIP1	SIP1	None	
	F.8	None	SIP1	SIP1	None	
	F.9	None	SIP1	SIP1	None	
	F.10	None	SIP1	SIP1	None	
	F.11	None	SIP1	SIP1	None	
	F.12	None	SIP1	SIP1	None	
	F.13	None	SIP1	SIP1	None	
	F.14	None	SIP1	SIP1	None	
	F.15	None	SIP1	SIP1	None	

The red box in the upper right shows that the console has been connected. If the connection is not successful, the box will show “Not Connected.”

